

New Working
New Living

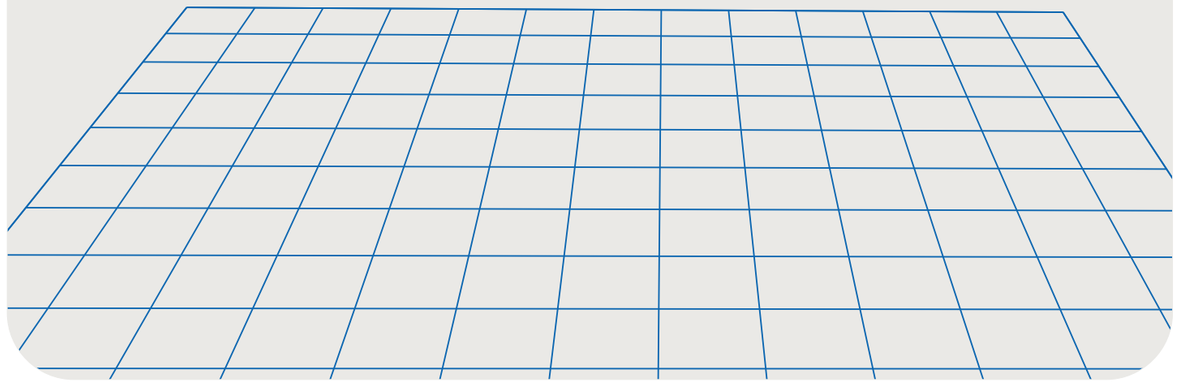

FlexiSpot

Item No. E5-Lite


User Manual

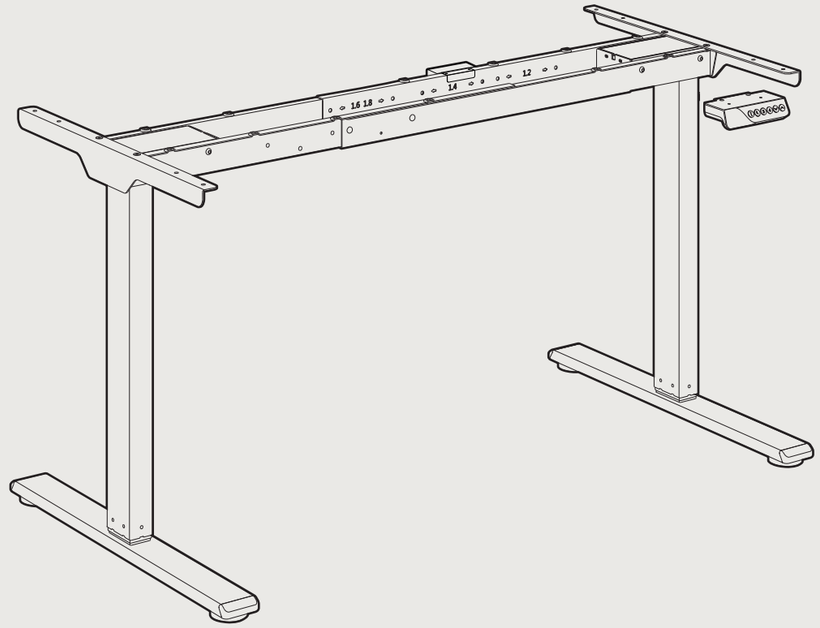


Specifications

Column Stage	3
Max. Load Capacity	100KG
Table Frame Width	1116mm、1286mm、1486mm
Max. Speed	30mm/s
Lowest Height	600mm
Highest Height	1250mm
Applicable Tabletop Size	Length：1200mm-1800mm Width：600mm-800mm Thickness：>18mm


Assembly Notes

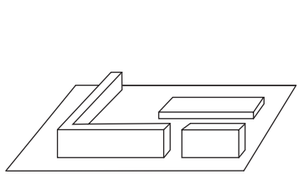

Install on carpet to prevent scratches.

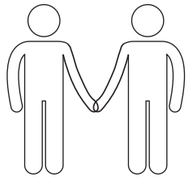

Need two or more people to cooperate together.

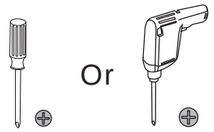

Suggest to bring your own Phillips screwdriver or pistol drill

Product List

Accessory Package

The line drawings below are for reference only and may differ slightly from the physical product in some cases. Please refer to the actual product for accuracy. If any tools are missing or there are problems with installation, please contact customer service.



Ax8 Bx8 Cx4 Dx4 Ex4 Fx20


Parts Included

FlexiSpot

No.	Part
①	Side bracket x2
②	Left beam x2
③	Right beam x2
④	Column x2
⑤	Handset x1 +
⑥	Power adaptor x1

No.	Part
⑦	Pedestal x2
⑧	AC power cable x1
⑨	Extension cord x1
⑩	Cable clip x4
⑪	T-socket wrench x1
⑫	Power adaptor bracket x 1
⑬	Adaptor cable x 1

Note: Handle screws are stored separately

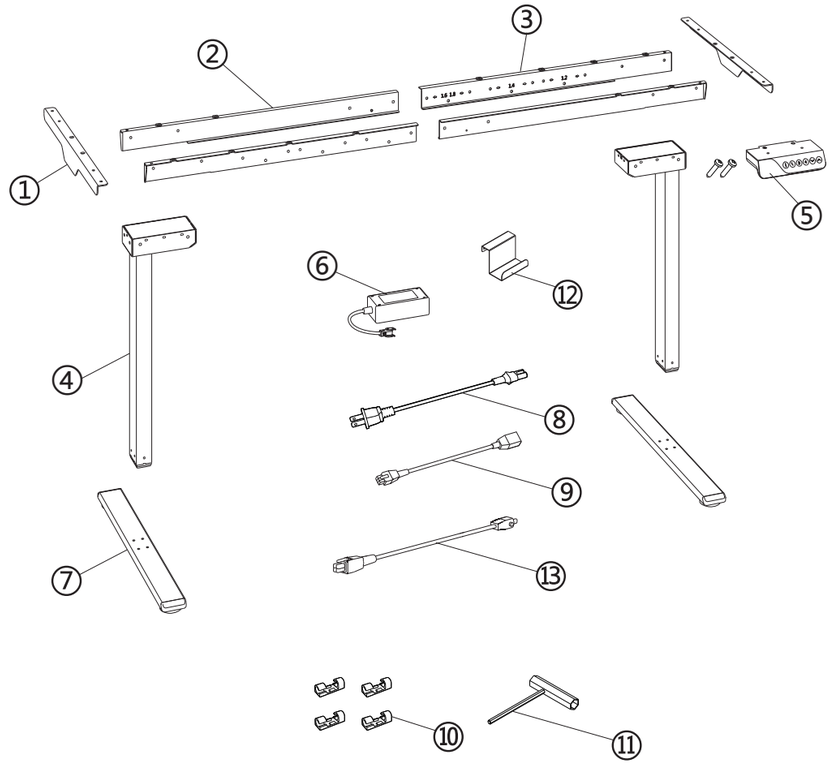

Assembly Steps

FlexiSpot


STEP1

Connect the beams

C x4 | D x4 | ⑪ x1


The beam has three adjustable positions. Please adjust the beam to the appropriate length

Suitable for a 1200-1300mm desktop

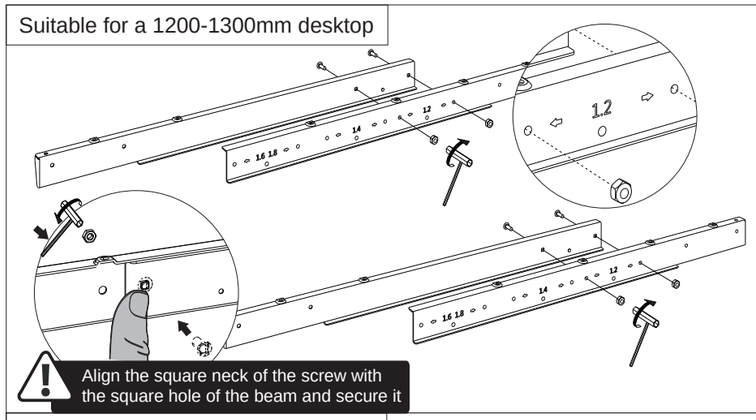


Align the square neck of the screw with the square hole of the beam and secure it

Suitable for a 1300-1500mm desktop

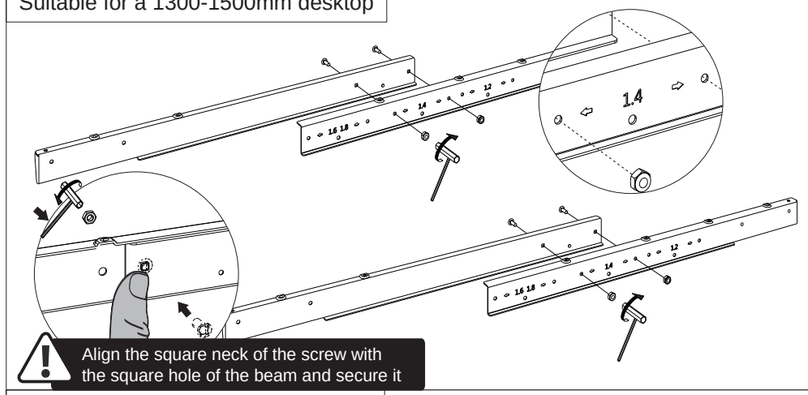

Align the square neck of the screw with the square hole of the beam and secure it

Suitable for a 1500-1800mm desktop

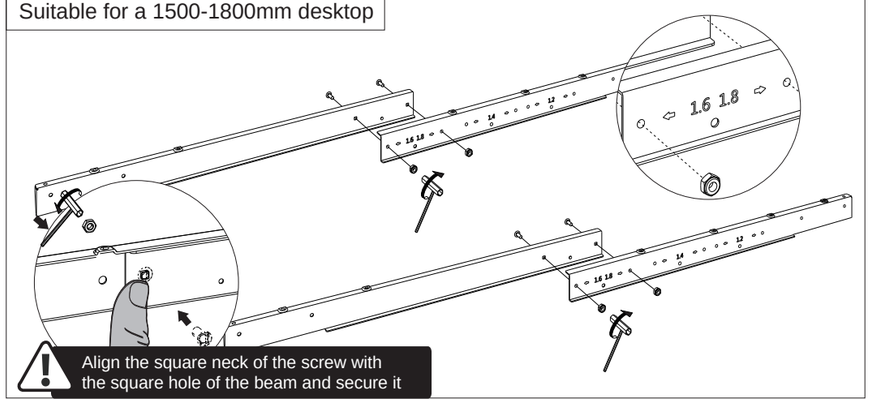


Align the square neck of the screw with the square hole of the beam and secure it


STEP2

Install the beam

A x8 | ⑪ x1

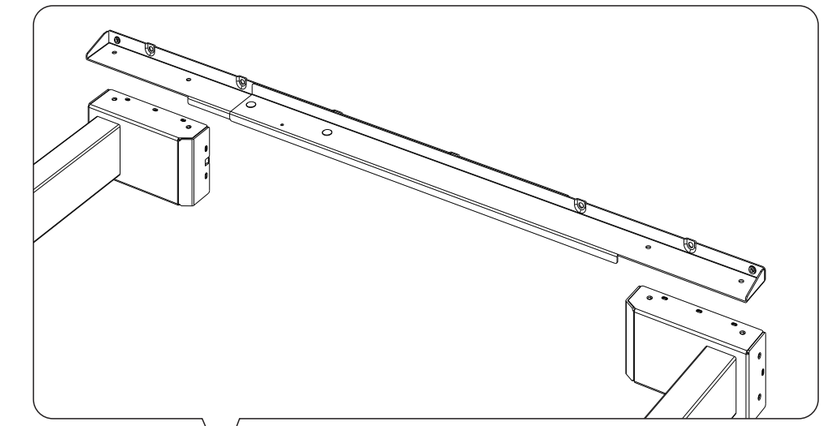


Pre-screw all screws for the installation of the crossbeam but do not tighten.Tighten them simultaneously finally.

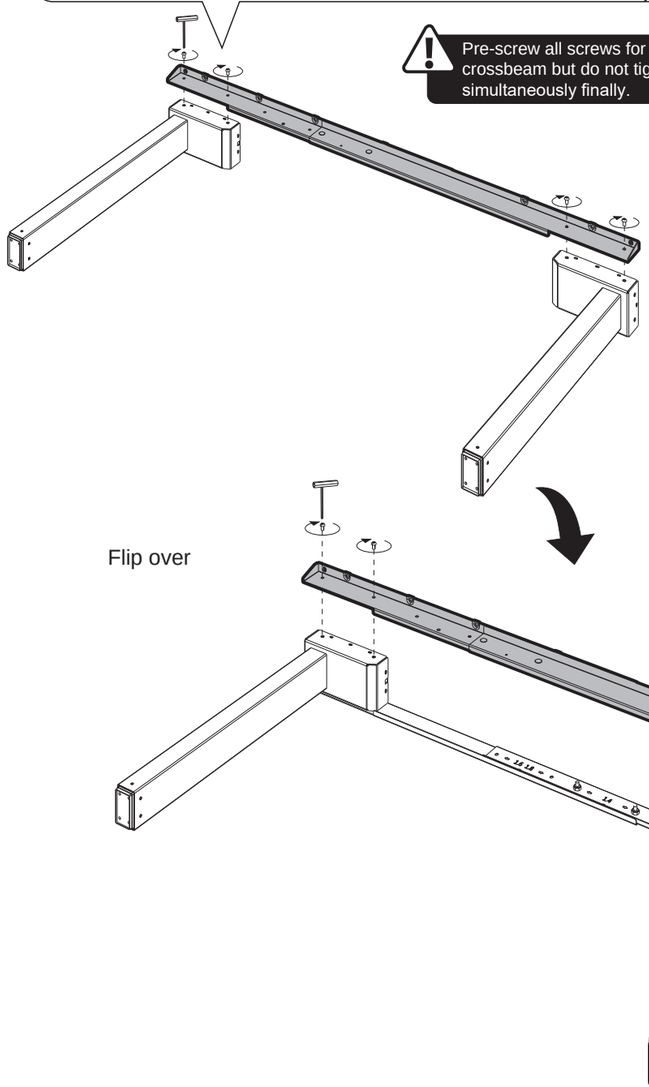


Flip over

STEP3

Install the Pedestal




During installation, it is important to prioritize the installation of diagonal screws.

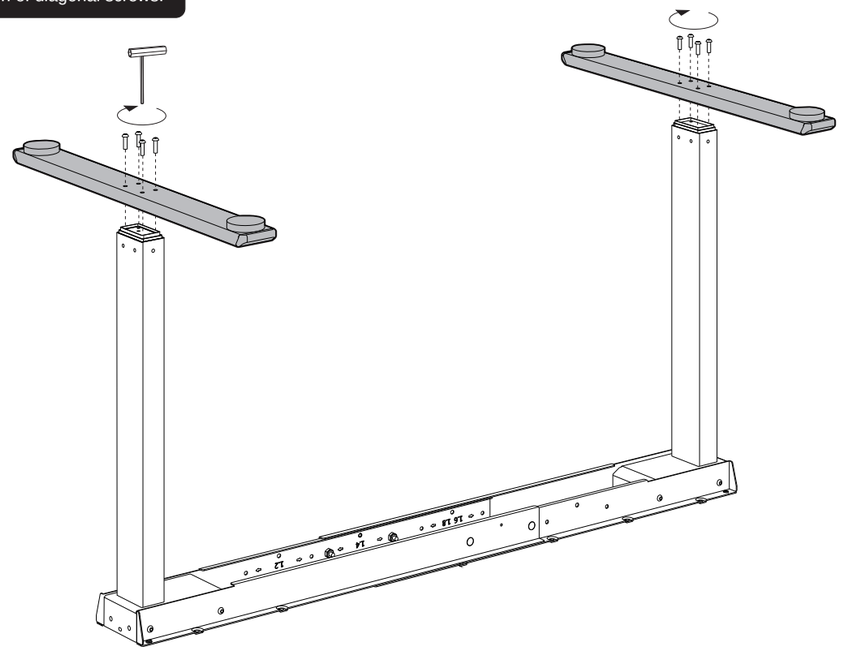


STEP4

Install the bracket




Pre-screw all screws for the installation of the crossbeam but do not tighten. Tighten them simultaneously finally.

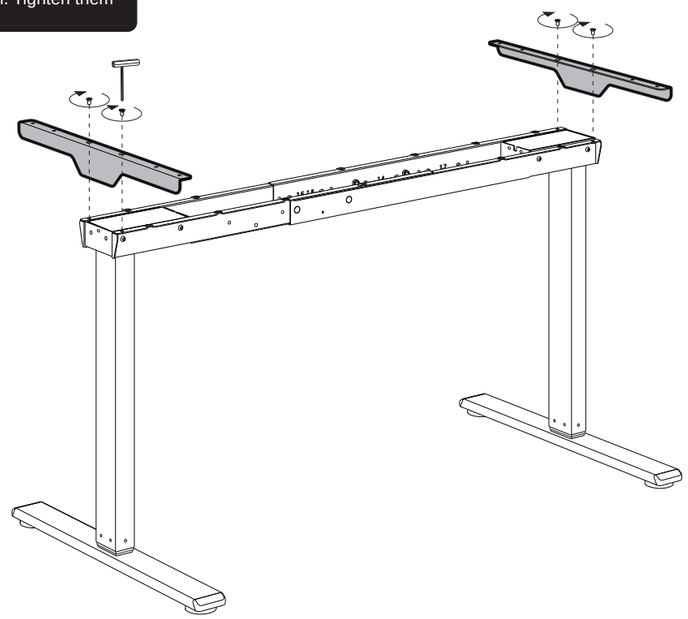

STEP5

Install the Adapter bracket

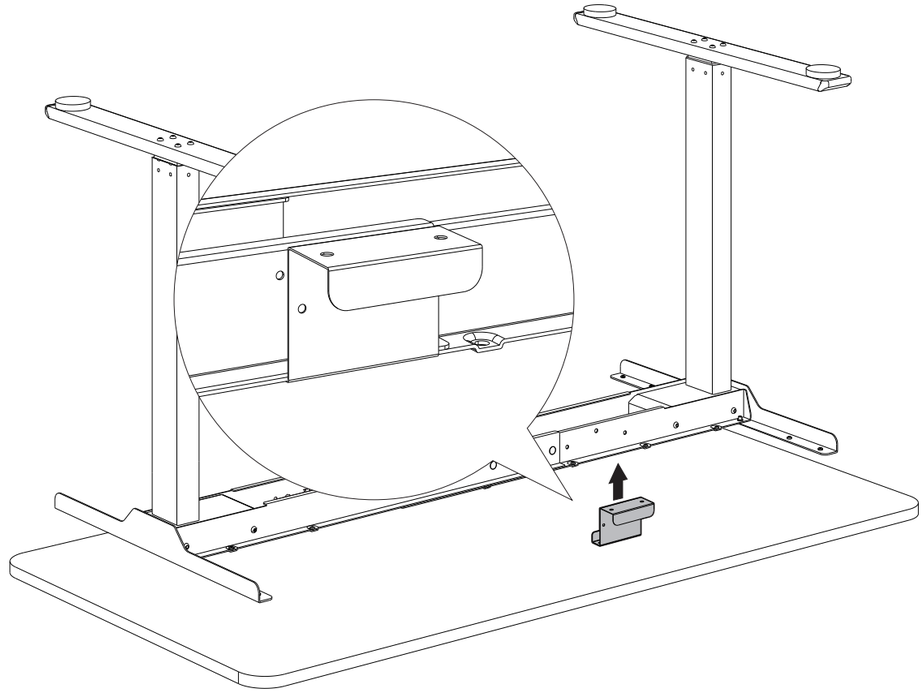


STEP6 Install the Tabletop

Suitable for a 1200-1300mm desktop

F x16

Self-prepared

The installation sequence for the screws is

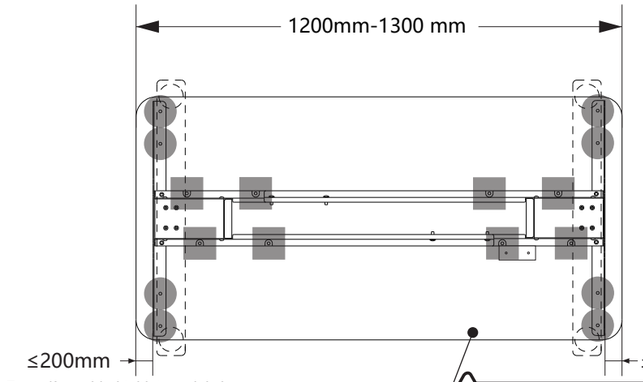

For self-provided tabletops, it is important to ensure sufficient strength.The reference value is 100kg, but the actual weight capacity may vary depending on the specific material of the tabletop.


The distance between the supporting bracket and the edge of the tabletop should not exceed 200mm.

Suitable for a 1300-1500mm desktop

F x18

Self-prepared

The installation sequence for the screws is

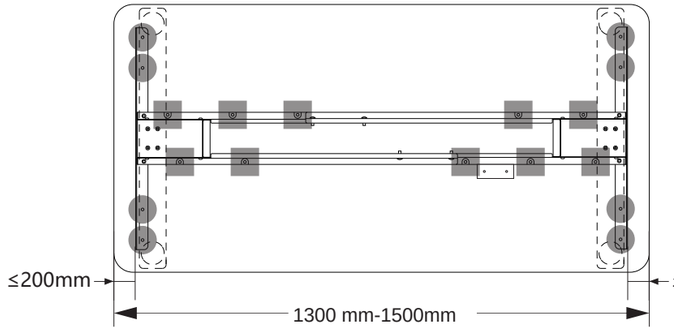


Suitable for a 1500-1800mm desktop

F x20

Self-prepared


The installation sequence for the screws is

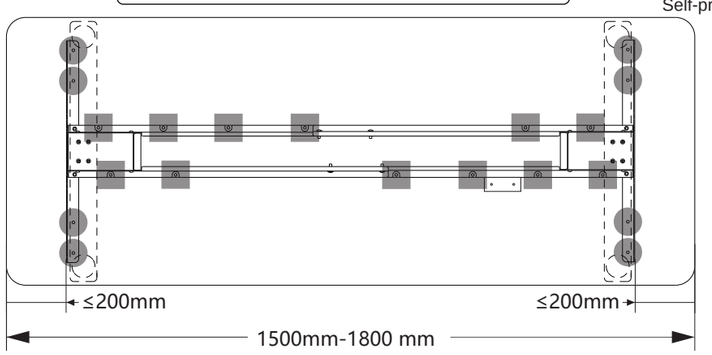


STEP7 Install the Handset

⑤ x2

Self-prepared

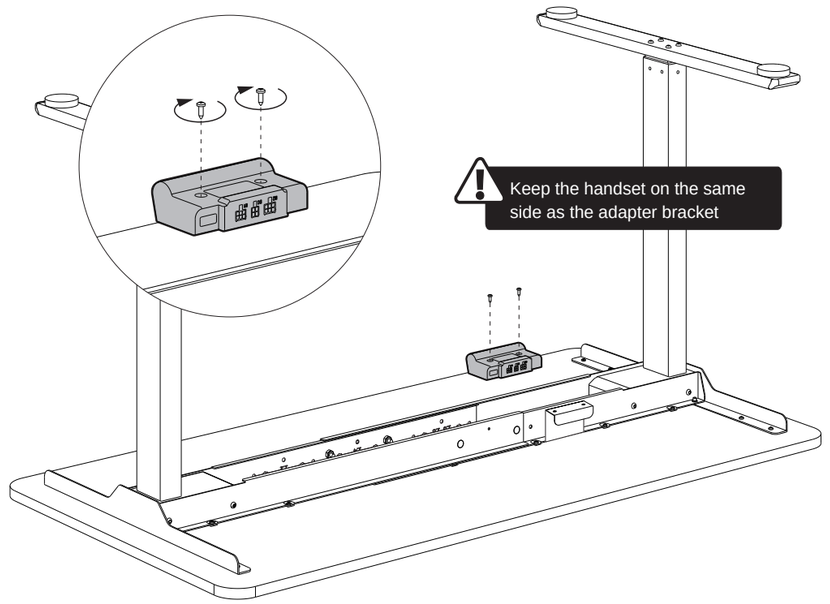



STEP8 Install the Adaptor

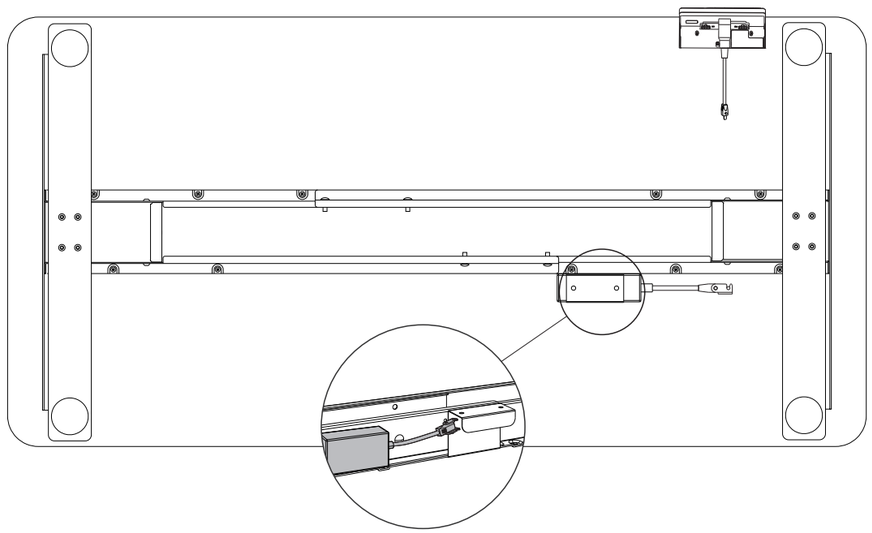



STEP9


Connect the cables

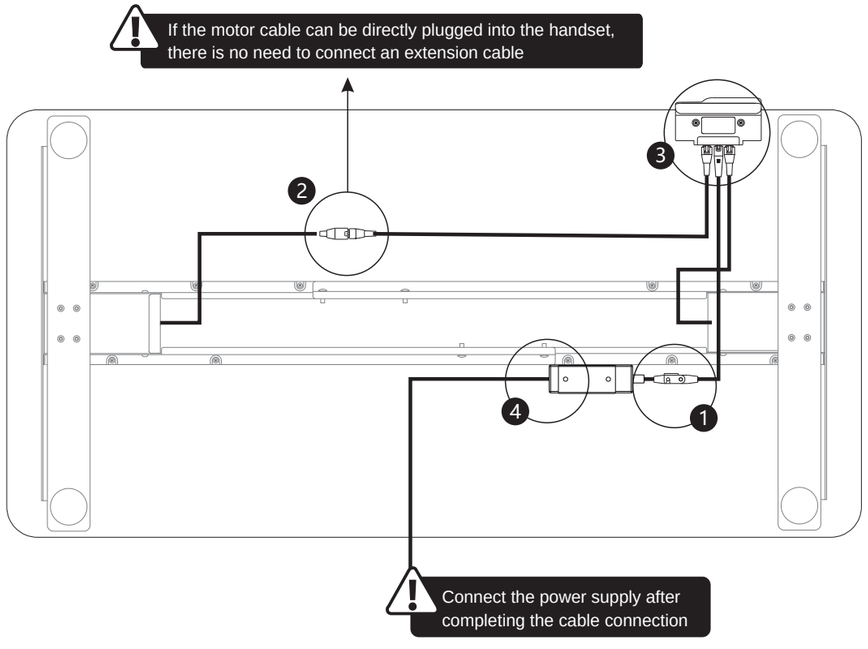

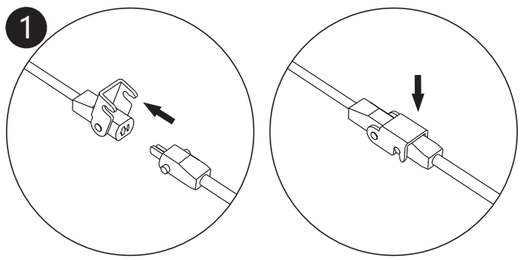


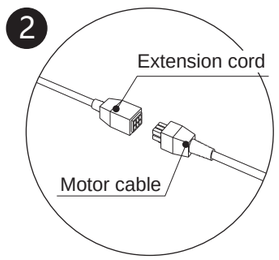

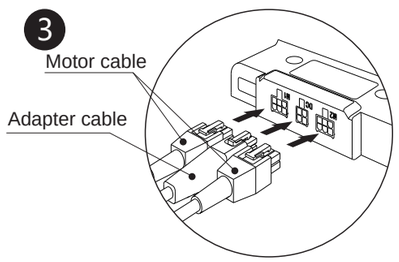

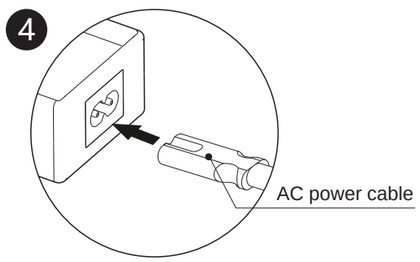



Use Cable clip to secure the various connecting wires to the desktop, keeping the cables tidy.

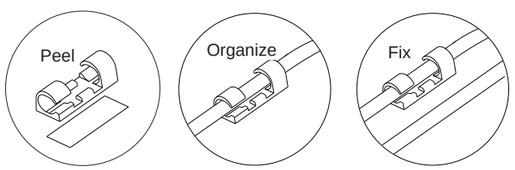



STEP10

Flip the table

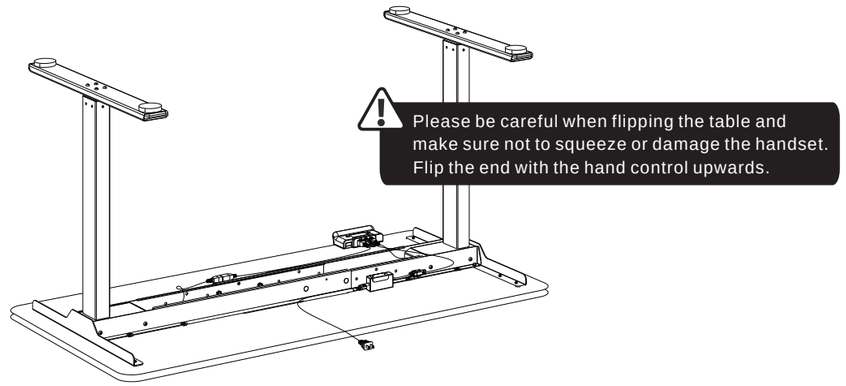

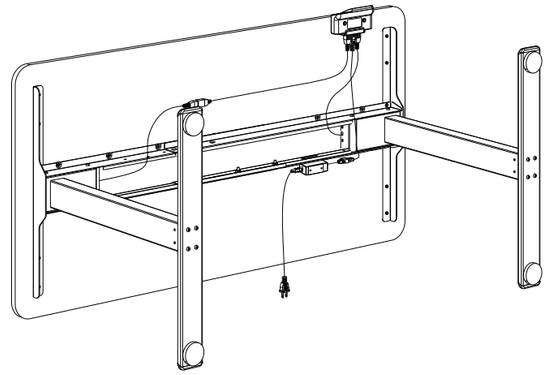

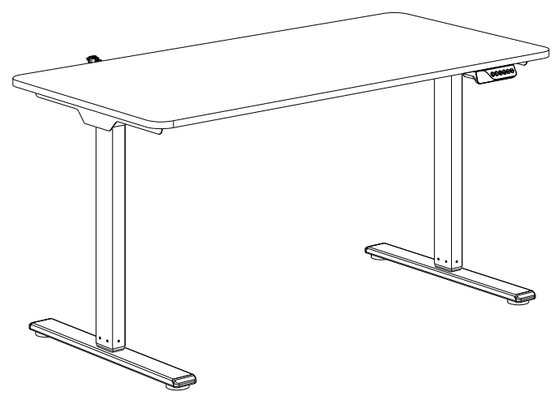

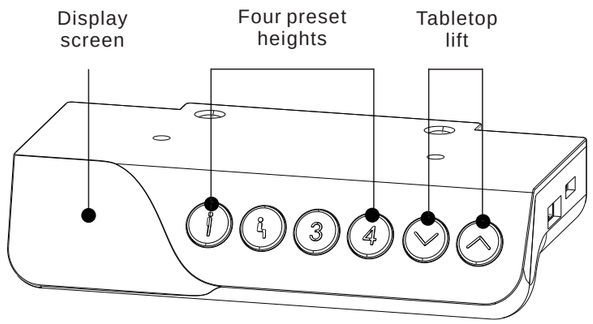


Note

Ensure that there are no obstacles blocking the movement of the table during the lifting process and confirm that all cables are long enough for the table to move up and down.

Suggestion


Set the most comfortable height when sitting as " 1 " and the most comfortable height when standing as " 2 ". Additional preset heights can be freely set to other heights.

● Button Control for Height Adjustment

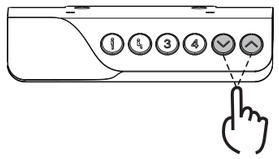

a. By pressing the " ∧ " or " ∨ " button, you can adjust the height of the lifting table up or down, and the current height will be displayed on the screen.


● Height Memory Function

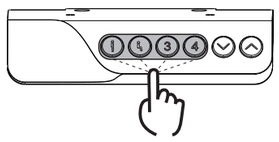

a. Press and hold the " 1 " button for 3 seconds, and the screen will display "S-1", indicating that the current height has been successfully saved in memory. Then, you can operate the lifting table to any height, and by pressing the " 1 " button, it will automatically return to the saved height.

b. The " 2 ", "3", and "4" buttons also have the same height memory function as the " 1 " button. By repeating the above steps, you can save the corresponding height in memory. Then, by pressing the respective button, the lifting table will automatically move to the saved height.

● Adjusting Collision Sensitivity

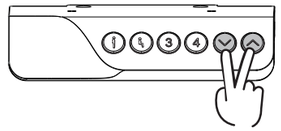

a. It has 4 gears, allowing you to adjust the sensitivity of the anti-collision function or to disable it.

b. At the same time, by holding down the "∧" and "∨" keys for more than 3 seconds, you can adjust the sensitivity. Each operation will switch to the next level.

c. The display screen shows "A-0", indicating that the collision prevention function is turned off.


The display screen shows "A-1", indicating low sensitivity.

The display screen shows "A-2", indicating medium sensitivity.


The display screen shows "A-3", indicating high sensitivity.

Note: The Anti-collision function is triggered only when a collision occurs under the conditions set by the system. This function only reduces the risk of collision and injury; it is not a non-contact protection system.

● Reset Function




a. When the display screen shows "rSt", the height-adjustable desk enters the reset state. Press and hold the " ∨ " button until the desk reaches the lowest position and stops rebounding. The display screen will show the height number. Release the downward button " ∨ " to complete the reset process.

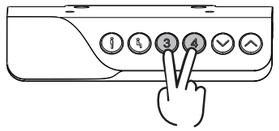

b. When the height-adjustable desk is in a stationary state, simultaneously press and hold the "3" and "4" keys for three seconds to enter the reset mode. Following the above steps will complete the reset process, and it will clear the memorized height settings.

Operation Instruction

● Error Code Processing

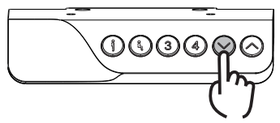

a.If there are other error codes and pressing the "⌄" downward key does not respond, please check that the connecting cable is not damaged and properly connected. Disconnect the power for at least 10 seconds, then reconnect it. The screen will display either "ᴙSᒋ" or "ᵣ-5ᒉ". Press and hold the "⌄" downward key to reset.

b.If the display shows "E01" or "E02", please allow the table to rest for at least 18 minutes before using it again.

c.If the desk still does not function properly after performing the above steps, please contact customer service for assistance.

● Fast charging features

Safety: The product is equipped with built-in over-temperature protection, over-current protection, short-circuit protection, and output interface current limiting protection. These features ensure that the product operates within a normal current range and safeguards against potential hazards.

Compatibility: The product is compatible with mainstream smartphones and laptops available on the market, allowing for fast charging of devices.

● Output parameters

a. Single USB Type-C port output: MAX 45W, 5V⎓3A, 9V⎓3A, 12V⎓3A, 15V⎓3A, 20V⎓2.25A.

b. Single USB Type-A port output: MAX 27W, 5V⎓2A, 9V⎓2A, 12V⎓1.5A, 15V⎓1.8A, 20V⎓0.9A, compatible with Huawei FCP/SCP, Samsung AFC protocols.

c. When both Type-C and Type-A are connected to the device, the output voltage drops to 5V to power the device, with a maximum of 15W.

d. Note: The charging function will be disabled while the height-adjustable desk is in the process of height adjustment. Once the height adjustment is stopped, the charging function will resume normal operation.

Resolving Common Issues

FlexiSpot

The following tips will help you detected and eliminate the common fault and error. If the fault you met is not listed below, please contact with your supplier. Only the manufacturer and professionals are capable for investigating and correcting those fault and error.

Problem	Solution
The electronic functions are unable to operate properly	Check the cable connection
Speed of lifting is slow	Check if the load weighs more than 100 kg
The worksurface slides downward	
The device often enters the reset state	
Only descending, not ascending, or only ascending, not descending	Perform a reset operation
Insufficient height for ascending and descending	
The bottom cannot rise	
After exceeding the working duty cycle requirements (Duty cycle: Max 2min on/18min OFF)	Power off for 18 minutes and then reconnect the power
When pressing the down key, the device goes up instead	Check if there are any obstacles or hanging cables under the table

Attention

1.Power supply: AC100V-240V, frequency 50/60Hz.
2.Operating environment: Indoor, 0-40℃.
3.Before cleaning, make sure to unplug the power cord. Use a slightly damp cloth to wipe away surface dust, taking care not to let water drip into the internal components or damage the connection wires. Regularly check if screws are loose and tighten them if necessary.
4.The electrical box contains electronic components, metals, plastics, wires, etc. Dispose of it according to the environmental regulations of your country, not as regular household waste.
5.Before using the product, carefully inspect and ensure that it has been correctly installed. Use only the accessories provided by the manufacturer for installation. Leave adequate safety clearance when placing the product to avoid pinch hazards.
6.Before first use, familiarize yourself with all the functions and program settings of the product.
7. Children are not allowed to play on this product. Certain unpredictable behaviors may result from children playing on the product, and the manufacturer will not be responsible for any resulting accidents.
8. Slight noises from the multi-belt or brake system caused by the structure will not affect the use of the equipment.
9. The use of corrosive or abrasive materials for cleaning equipment is prohibited. Make sure that the cleaning agents used will not contaminate the environment.
10. Operate the equipment only after understanding the relevant hazards. Children under the age of 14 or individuals with physical or sensory impairments or mental disabilities should use the equipment under proper supervision and guidance. Children should not have unattended access to the product.
11. Children should not perform cleaning and user maintenance without supervision.
12. In case of power cord damage, it must be replaced by the manufacturer or relevant professionals to avoid injury.
13. Ensure that your operating environment is free of any potential hazards, such as not littering tools. Always handle packaging materials with caution to avoid various potential dangers, such as the choking hazard posed by children playing with plastic bags.
14. When moving the product, ensure that there are no items placed on the table, the drawers and doors are closed securely, screws are tightened, and the power plug is unplugged. Use at least 2 people for moving. If necessary, keep the original packaging for future transportation.
15. When storing for a long time, unplug the power cord and clean out any loose objects. Store it in a cool and dry place.
16. This product contains small parts that can pose a choking hazard if swallowed accidentally. Keep these small accessories away from children.
17. Do not disassemble, modify, or repair the product's control system or mechanical system without authorization.
18. If this product is equipped with an obstacle detection and reversal function, this function is an auxiliary protection design and may not trigger in extremely rare cases. It may also be less likely to trigger for certain special types of obstacles (such as soft/flexible items or obstacles with a very small contact surface). Before using the lifting function, be sure to check that the lifting path is clear. Do not place valuable, fragile, or precision items under the desk. During lifting, do not insert hands, limbs, pets, or the like into the lifting travel range.

Recycling and Disposal

not be disposed with other household wastes. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the return and collection systems or contact the retailer where the product was purchased. They can take this product for environmental safe recycling.